



Instructions

Eldex® Eldex Laboratories, Inc.
30 Executive Court
Napa, CA 94558-6278
USA

Tel: (707) 224-8800
(800) 969-3533
Fax: (707) 224-0688
email: service@eldex.com

**Quick Connect
Installation; P/N
5728**

1. You will need a 5/32 hex key to remove the standard liquid end.
2. Turn the piston stroke setting device (if available) so it is set to full stroke.

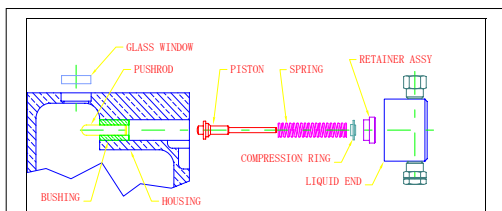


Figure 1: Pump Assembly

3. Remove liquid end from pump as follows: Unscrew the two socket head bolts (with the 5/32 hex key) while holding the liquid end against the pump housing. Pull the liquid end straight out from the pump housing, in line with the axis of the piston. If you cock or tilt the liquid end, you may break the piston. See Figure 1.
4. Screw in the two studs supplied with the quick disconnect kit (in place of the two socket head bolts you removed when removing the liquid end). The studs should be screwed in finger tight, until they reach a positive stop.
5. Place the compression ring on the piston and spring, and the retainer on the liquid end.
6. Slide the liquid end on the two studs, guide the piston through the center of the retainer.

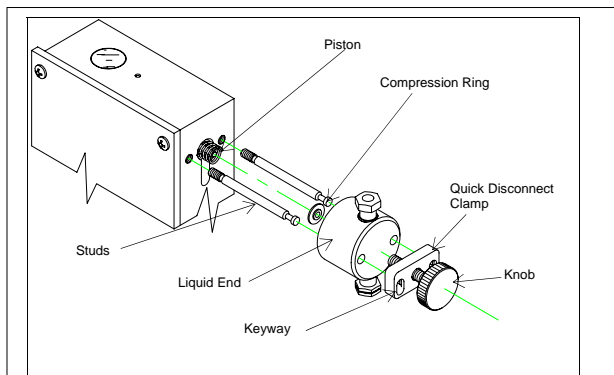


Figure 2: Exploded View of Quick Connect

7. Place the quick connect clamp into position on the two studs. The clamp will go over the heads of the studs through the larger hole of the keyway. When the keyway is positioned over the groove (or, smaller diameter) of the stud, slide the clamp down to capture the studs with the smaller hole of the keyway.
8. Finger tighten the assembly with the knob so the liquid end is against the pump body (two screw/knob assemblies are provided, you may wish to use the shorter one when the pump has a wash system installed).

If there is anything we can do to help you with these instructions, or, if you have comments or suggestions, please contact us at:
(800) 969-3533



Instructions

Eldex® Eldex Laboratories, Inc.
30 Executive Court
Napa, CA 94558-6278
USA

Tel: (707) 224-8800
(800) 969-3533
Fax: (707) 224-0688
email: service@eldex.com

**Quick Connect
Installation; P/N
5728**

1. You will need a 5/32 hex key to remove the standard liquid end.
2. Turn the piston stroke setting device (if available) so it is set to full stroke.

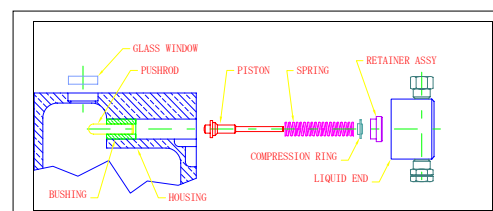


Figure 1: Pump Assembly

3. Remove liquid end from pump as follows: Unscrew the two socket head bolts (with the 5/32 hex key) while holding the liquid end against the pump housing. Pull the liquid end straight out from the pump housing, in line with the axis of the piston. If you cock or tilt the liquid end, you may break the piston. See Figure 1.
4. Screw in the two studs supplied with the quick disconnect kit (in place of the two socket head bolts you removed when removing the liquid end). The studs should be screwed in finger tight, until they reach a positive stop.
5. Place the compression ring on the piston and spring, and the retainer on the liquid end.
6. Slide the liquid end on the two studs, guide the piston through the center of the retainer.

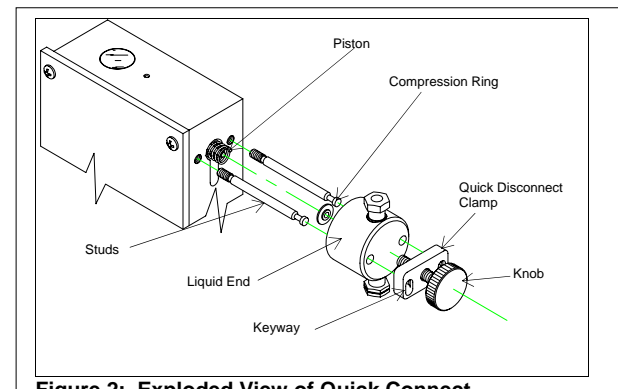


Figure 2: Exploded View of Quick Connect

7. Place the quick connect clamp into position on the two studs. The clamp will go over the heads of the studs through the larger hole of the keyway. When the keyway is positioned over the groove (or, smaller diameter) of the stud, slide the clamp down to capture the studs with the smaller hole of the keyway.
8. Finger tighten the assembly with the knob so the liquid end is against the pump body (two screw/knob assemblies are provided, you may wish to use the shorter one when the pump has a wash system installed).

If there is anything we can do to help you with these instructions, or, if you have comments or suggestions, please contact us at:
(800) 969-3533